

# 054-0500: sona micro tubes and domes kit

<p><b>054-0351</b> Micro tube S0B-L</p>	<p><b>054-0347</b> Micro tube S0B-R</p>	<p><b>054-5249-001</b> Measuring tool with over insertion protector</p>	<p><b>054-0533</b> Battery door removal tool</p>	<p><b>054-1887</b> Open dome S</p>	<p><b>054-1888</b> Open dome M</p>	<p><b>054-1889</b> Open dome L</p>	
<p><b>054-0352</b> Micro tube S1B-L</p>	<p><b>054-0348</b> Micro tube S1B-R</p>			<p><b>054-1890</b> Closed dome S</p>	<p><b>054-1891</b> Closed dome M</p>	<p><b>054-1892</b> Closed dome L</p>	
<p><b>054-0353</b> Micro tube S2B-L</p>	<p><b>054-0349</b> Micro tube S2B-R</p>	<p><b>026-0697</b> Measurement tool</p>	<p><b>054-1893</b> Power dome S</p>	<p><b>054-1894</b> Power dome M</p>	<p><b>054-1895</b> Power dome L</p>	<p><b>004-0081-001</b> Hook HE9 680</p>	<p><b>004-6389-131</b> Over insertion protector</p>
<p><b>054-0354</b> Micro tube S3B-L</p>	<p><b>054-0350</b> Micro tube S3B-R</p>	<p><b>054-0344</b> Cleaning pins</p>	<p><b>002-0468-1</b> Pin 0.7x6.05 mm</p> <p><b>002-0404-1</b> Pin removal tool</p>	<p><b>005-5132</b> Probe tube</p>			

# 054-0500: sona micro tubes and domes kit



**054-0351**  
Micro tube SOB-L

**054-0347**  
Micro tube SOB-R

**054-0352**  
Micro tube S1B-L

**054-0348**  
Micro tube S1B-R

**054-0353**  
Micro tube S2B-L

**054-0349**  
Micro tube S2B-R

**054-0354**  
Micro tube S3B-L

**054-0350**  
Micro tube S3B-R

